



### Seat Heater

The seat heater can be switched on when the steering lock is in position "1" or "2".

#### Heater operation:

Push in upper switch portion; position 1 = normal heater operation, one indicator lamp lights up.

Push in lower switch portion; position 2 = rapid heating, both indicator lamps light up.

After approximately 5 minutes in the rapid heating mode, the heater automatically switches to normal operation and only one indicator lamp will stay on.

#### Turning off heater:

If one indicator lamp is on, press in upper part of switch, position 1.

If both control lamps are on, press in lower part of switch, position 2.

The heater automatically turns off after approximately 30 minutes of operation.

#### Note:

When in operation, the seat heater consumes a large amount of power. It is advisable not to use the seat heater longer than necessary.